

# Polycarbonate Fasteners - Poly Tek<sup>®</sup>

Self-drilling screws and sealing washers are designed for fixing polycarbonate, fibreglass, PVC and fibre cement sheeting to both timber and metal.

## How To Use

- For roofing drill a 10mm hole and fix accordingly to roof sheet manufacturers specifications.
- Insert the PolyTek<sup>®</sup> screw and ensure the washer is over the hole. Drive screw home with a 5/16" Hex socket fitted to a power screwdriver.
- Be careful not to overtighten.
- To calculate the number of fasteners/washers required, multiply the square metre of the roof by five.

## Fastening Polycarbonate and Fibreglass Sheeting to Steel Battens

Hexagon Head with washer (Tek<sup>®</sup>)

Product Range			
Gauge	Dimensions	Pack Quantity	Part Number
12g	12-14x35mm	500	6-310-300497


## Fastening Polycarbonate and Fibreglass Sheeting to Timber Battens

Product Range			
Gauge	Dimensions	Pack Quantity	Part Number
12g	12-11x50mm	500	6-030-300510

## Sealing Washers

Application	Recommended Screw:			
For use with polycarbonate and fibreglass sheeting.	Dome Washers (EPDM)			
	Product Range			
	Size	Colour	Pack Quantity	Part Number
	23mm	Grey	1000	6-989-300503

For use with fibreglass, PVC and fibre cement sheeting.	Weather Lok Washers			
	Product Range			
	Size	Colour	Pack Quantity	Part Number
	20mm	Grey	100	1-696-9002-8TP
	20mm	Grey	1000	8-696-0002-9
32mm	Grey	100	1-696-9001-6TP	
	32mm	Grey	1000	8-696-0001-5

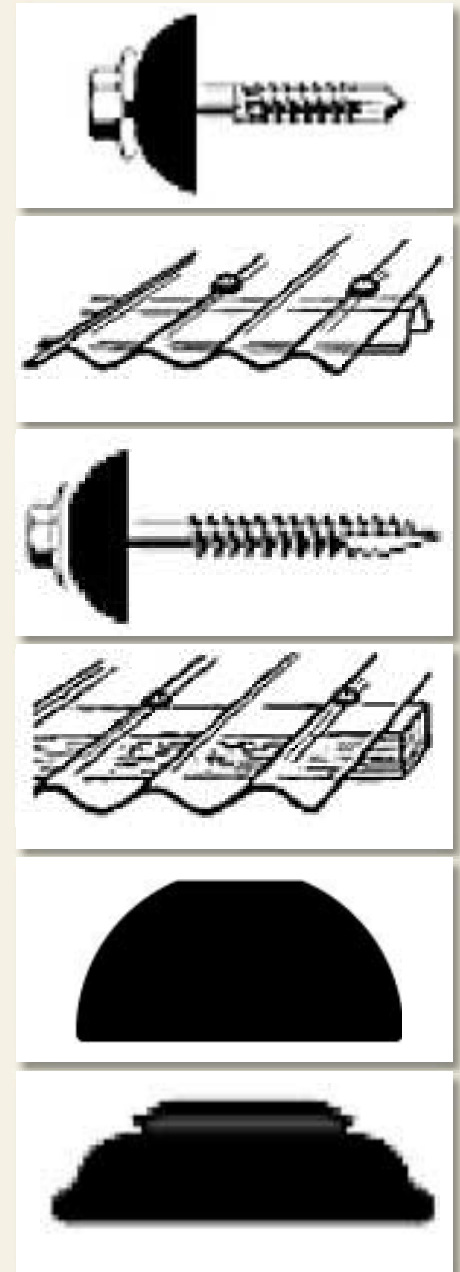

Metroll Newcastle  
 ABN 97 001 446 439  
 268 Macquarie Road  
 WARNERS BAY NSW 2282  
 AUSTRALIA

P: +61 (0)2 4954 5799  
 F: +61 (0)2 4954 0891  
[www.metrollnewcastle.com.au](http://www.metrollnewcastle.com.au)  
[enquiries@metrollnewcastle.com.au](mailto:enquiries@metrollnewcastle.com.au)